

Xprox Proximity Reader Programming

1 Enter Programming Mode (Default Master Code - "0000")

F/C	9	1	Master Code	ENT
-----	---	---	-------------	-----

2 To Exit Programming Mode

F/C	9	2	ENT
-----	---	---	-----

3 To Change Master Code

F/C	9	4	New Master Code	ENT
-----	---	---	-----------------	-----

4 Set Lock Timer (001sec until 255sec)

F/C	7	0	2	3 digit time	ENT
-----	---	---	---	--------------	-----

5 Enable / Disable User Code (0-disable / 1-enable)

F/C	7	1	3	0 / 1	ENT
-----	---	---	---	-------	-----

6 Add or Change User Code (User No. 1 - 5 only, Default User 1 Code - "1234")

F/C	7	1	4	User No.	New 4 digit code	ENT
-----	---	---	---	----------	------------------	-----

7 Add One Card or Card+Pin (User No. 0001 - 1000)

F/C	1	1	User No.	ENT	Touch New Card	ENT
-----	---	---	----------	-----	----------------	-----

F/C	1	1	User No.	ENT	Touch New Card	New Pin Code	ENT
-----	---	---	----------	-----	----------------	--------------	-----

8 Delete One Card (User No. 0001 - 1000)

F/C	1	2	9	User No.	ENT
-----	---	---	---	----------	-----

9 Add Range of Cards (User No. 0001 - 1000)

F/C	1	3	User No.	ENT	Touch New Card	Touch New Card	F/C
-----	---	---	----------	-----	----------------	-------	----------------	-----

10 Delete Range of Cards (User location 0001 - 1000)

F/C	1	4	Starting user location	Ending user location	ENT
-----	---	---	------------------------	----------------------	-----

11 Delete all Cards

F/C	1	5	9	9999	F/C
-----	---	---	---	------	-----

12 To Open Door

by Card & Pin
by Card only
by Pin only

Flash Card	Pin Code	ENT
Flash Card		
Pin Code	ENT	